



INSTALLATION GUIDE

**CTS Turbo TSI Gen 3 Boost Tap Kit
CTS-HW-1 18**

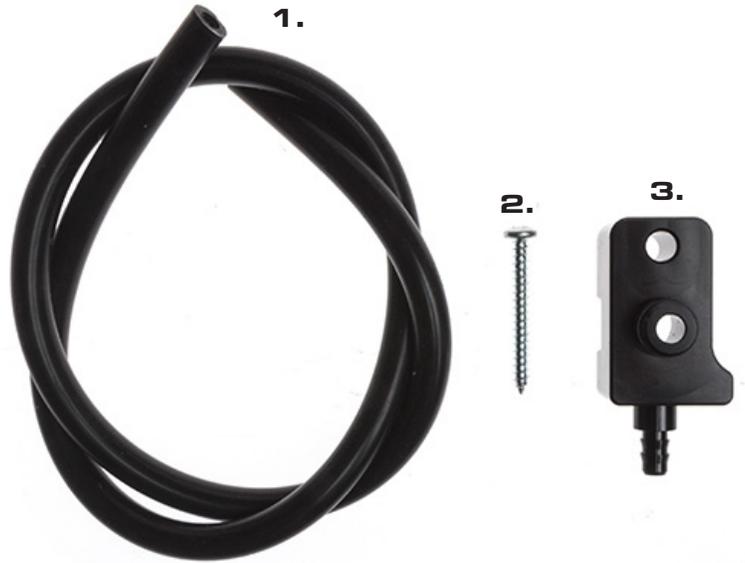


**20630 Mufford Crescent, Unit #309
Langley, British Columbia V2Y 2V9**

www.CTSTURBO.com

WHAT IS INCLUDED

1. Silicone Vacuum hose
2. Extended Mounting screw
3. Boost tap

**TOOLS REQUIRED**

1. T-25 Torx
2. Phillips screwdriver

NOTES

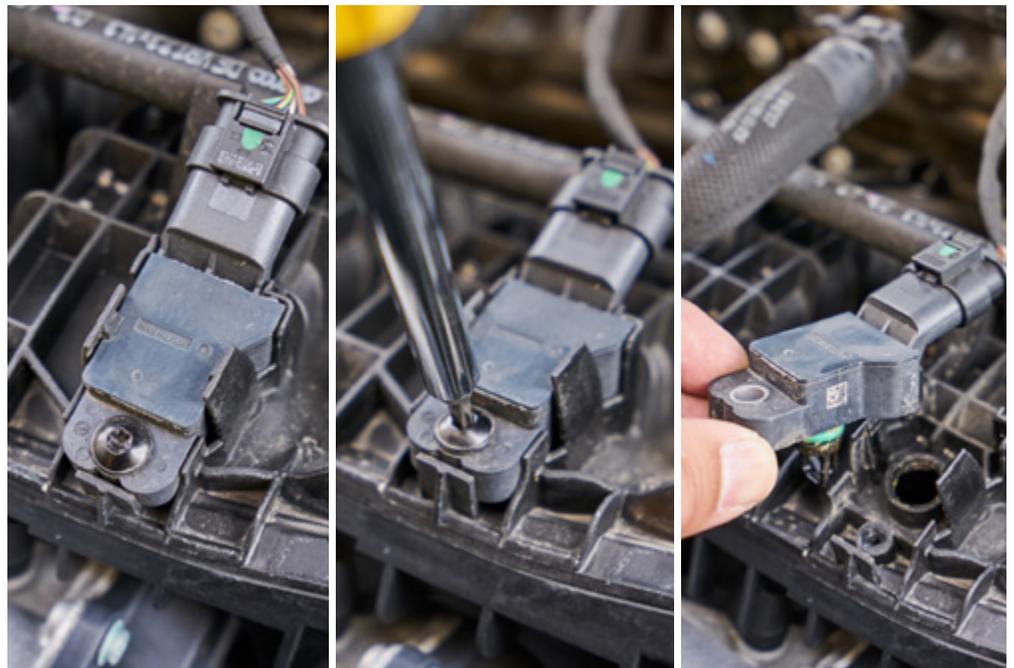
Vehicle used in this guide is a 2015 Audi S3. Always make sure the car is safe to work on. Do not work on a hot motor. We do not accept any liability for incorrect installation or damage during the install.

STEP 1

Begin by removing valve cover. Locate the MAP sensor where we will be installing the boost tap.

**STEP 2**

Use a T-25 to remove the stock mounting screw and unclip the sensor.



STEP 3

Insert the CTS boost tap in the orientation shown.

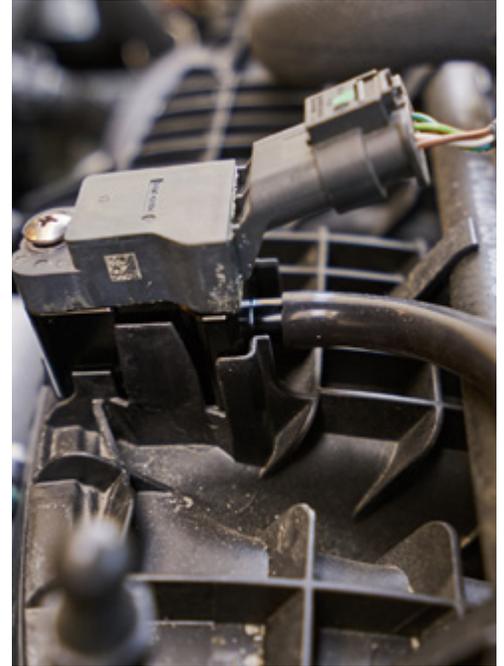
**STEP 4**

Reinstall the MAP sensor to the top of the boost tap and mount it securely using the provided extended mounting screw.



STEP 5

Attach the silicone vacuum hose to the boost tap and route the hose where required for your application.

**STEP 6**

Replace your valve cover.

You are done.

